## 东芝 2618A 打印机查看 IP 地址

一、图为打印机显示屏,点击用户功能。





三、输入管理员密码: 123456 并确认。





## 四、点击网络。



## 五、点击 IPv4 查看 IP 地址。

10 用户	功能				
网络					
/					
	IPv4	IPv6	IPX / SPX	NetWare	SMB
	oppleTalk	нттр	以太网	其它	
	网络检查				
			现在应用	-	

## 六、查看打印 IP 地址。

IDithic				
10	10	96	99	
子网掩码				
255	255	0	0	
□				
10	10			
		町で出	确定	•
	P地址 10. 子网掩码 255. 网关 10.	P地址 10.10. 子网扽码 255.255. <b>网关</b> 10.10.	P地址 10.10.96. 子网掩码 255.255.0. 网关 10.10.255.	P地址 10.10.96.99 子网拖吗 255.255.0.0 <b>网</b> 关 10.10.255.254